


OES Model ISC9000 Scoreboard controller

Sunset rink

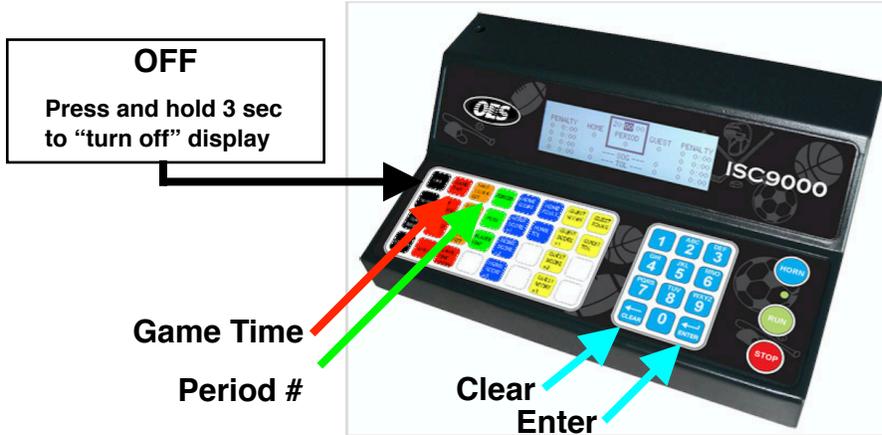

TASK	DO	TIPS / NOTES
Game time (Period length)	[GAME TIME] (red) ## [ENTER][ENTER][ENTER]	Controller will not respond while hand switch is positioned "on". When the end-of-period horn sounds, ensure to flip hand switch to "off".
Period number	[PERIOD] (green) # [ENTER]	Period number will auto-increment with each update of GAME TIME.
Clock start / stop	Flip the hand switch "on" after the ref blows the whistle <i>and</i> has dropped the puck. Stop on any other whistle. <i>Be careful not to sound the Horn!</i>	When there's a goal or a penalty, take immediate note of the displayed time as a way of helping the scorekeeper.
Scoring	[HOME SCORE] [+1] [GUEST SCORE] [+1]	Directly set score using [HOME SCORE] # [ENTER] [GUEST SCORE] # [ENTER]
Penalty - entering	[HOME PENALTY] or [GUEST PENALTY] [ENTER] [2] [ENTER] [ENTER]. To add another penalty – repeat the above	Can usually skip jersey # (1st ENTER). Cursor defaults into next available row. Mode will "time out" if you're slow but so long you input the minutes and press ENTER to move into the <i>next</i> row down, you should be ok.
Penalty - clearing	[HOME PENALTY] or [GUEST PENALTY], press as many x as needed to reach row to clear [CLEAR] [ENTER]	First key press will jump you into the next row below the current penalties. That's why the need for extra presses.

If the hand controller won't work, unplug it and use the set-top Start and Stop buttons.